

## (5) Sub Information

- Selection of Sub Information

The sub information display items may be switched by briefly pressing the  $\vee/\wedge$  buttons in Engine Speed Display, Speed/Fuel Display or Fuel Display Screen.

- Resetting the display value

The display value of the Trip hours, Trip distance, Average fuel economy and Total fuel consumption may be reset by pressing and holding the  $\vee/\wedge$  buttons until a buzzer sound is heard. (Display values other than those displayed will also be reset at the same time.)



Types of Sub Information		
Display screen	Display item	Display description
	Total operating hours	Indicates the total cumulative operating hours of the outboard motor.
	Trip hours	Indicates the operating hours after resetting.
	Trip distance	Indicates the trip distance after resetting. Unit of display will be the distance unit selected. *Separate GPS module or water speed sensor is required.
	Battery voltage/Cooling water temperature	Indicates the battery voltage. Indicates the cooling water temperature.
	Instantaneous fuel flow rate	Indicates the instantaneous fuel flow rate of each outboard motor. Units of display are the fuel volume unit and distance unit selected.
	Instantaneous fuel economy	Indicates the total instantaneous fuel economy of outboard motors. Units of display is the fuel volume unit selected. *Separate GPS module or water speed sensor is required.
	Average fuel economy	Indicates the total average fuel economy of outboard motors after resetting. Units of display are the fuel volume unit and distance unit selected. *Separate GPS module or water speed sensor is required.
	Total fuel consumption	Indicates the total fuel consumption of the outboard motor after resetting. Unit of display is the fuel volume unit selected.
	Latitude/longitude	Indicates the latitude/longitude coordinates of the current position. *Separate GPS module is necessary.